



Quick Installation Guide CWGE2MC

1. Overview

The CWGE2MC Un-managed Mini-Media Converter is designed to expand reliable Ethernet connectivity to Industrial applications. CWGE2MC is equipped with one 100/1000 Base-T ports one 100FX/1000Base-X SFP slot enclosed in IP30 housing.

2. Package Checklist

CWGE2MC is shipped with the following items*. If any of these are missing or damaged, please contact your customer service representative for assistance.

- CWGE2MC Media converter
- Power adapter
- Quick Installation Guide

*Contents of the package can be adjusted based on customer demand.

3. Hardware Installation Procedure

STEP 1: Remove from packaging and connect the 12V DC adapter to the power input on rear panel.



Safety first

Turn the power off before connecting modules or wires. The correct power supply voltage is listed on the product label. Check the voltage of your power source to make sure that you are using the correct voltage. Do NOT use a voltage greater than what is specified on the product label.


Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size. If current go above the maximum ratings, the wiring could overheat, causing serious damage to your equipment.

Note: You MUST turn off the power before unplugging or plugging the DC Jack or terminal block connector.

STEP 2: Connect the Ethernet (RJ45) port to the networking device. See the LNK/ACT LED to confirm if the connection is established.

STEP 3: Insert the SFP and connect the fiber cable to the fiber port

Panel view

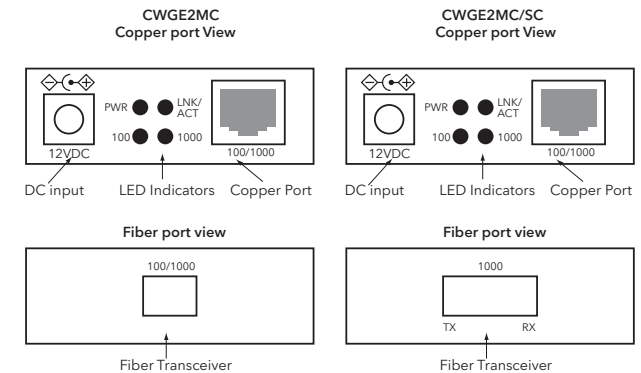

4. LED Indicators


Unit LEDs		
LED	Condition	Status
PWR (Green)	Illuminated	Primary power is supplied to media converter
	Off	Primary power off or failure
100 (Green)	Illuminated	Both RJ45 and SFP link speed at 100Mbps
	Off	Either SFP or RJ45 is not operating at 100Mbps speed
1000 (Green)	Illuminated	Both RJ45 and SFP link speed at 1000Mbps
	Off	Either SFP or RJ45 is not operating at 1000Mbps speed
LNK/ACT (Green)	Illuminated	Ethernet link up
	Blinking	Activity (receiving or transmitting data)
	Off	Port disconnected or link failed

5. Configuration diagrams

The Media converters can be used in pair to communicate between copper switch as in diagram 1 or single converter can be used to communicate between fiber and copper switch. Please follow below diagrams and associated table to set up your environment.

■ Diagram I: Converters used in pair

The below diagrams illustrate how media converters can be used to increase the distance between two copper switches. To effectively communicate the speeds of copper and fiber ports of media converter must be same. The following table shows the speed user can use between media converter and switches and which LED will glow with respect to that speed.

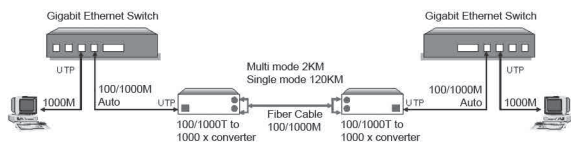


Media converter speed and respective LED

Item	Gigabit switch 1 Setting	SFP Type between CWGE2MCs	Gigabit switch 2 Setting	CWGE2MC LED
1	Auto(100/1000)	GbE	Auto (100/1000)	1000
2	Auto (100/1000)	FX	Auto (100/1000)	100
3	Auto (100)	FX	Auto (100)	100
4	1G(Force)	GbE	1G(Force)	1000
5	100F (Force)	FX	100F (Force)	100
6	100H (Force)	FX	100H (Froce)	100

■ Diagram II: Single Media Converter

The below diagrams illustrate how one media converter can be used to increase the distance between copper switch and fiber switch. To effectively communicate, the speeds of copper and fiber ports of media converter must be the same.

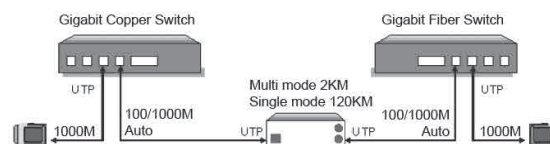

Media converter speed and respective LED

Item	Gigabit copper switch setting	SFP used in CWGE2MC	Gigabit fiber switch setting	CWGE2MC LED
1	Auto(100/1000)	GbE	GbE	1000
2	Auto (100/1000)	FX	FX	100
3	Auto (100)	FX	FX	100

6. LIMITED WARRANTY

ComNet Corporation warrants this product against defect in materials and workmanship for a period of TWO (2) YEARS to the original purchaser.

If you discover a defect, ComNet will, at its sole option, repair or replace the product at no additional charge, provided that you contact ComNet technical support to obtain a Return Merchandise Authorization Number (RMA) and instruction on how and where repairs can be made. This warranty does not apply if the product has been damaged by accident, abuse, misuse, misapplication, neglect, re, water, lightning or other acts of nature, failure to follow supplied instructions, installation or removal, have been repaired or have undergone attempted repair by unauthorized personnel without written consent from ComNet, modified, defaced, or has its serial numbers removed.

ComNet reserves the right to use remanufactured, refurbished, or used parts and components in making warranty repairs.

All expressed or implied warranties for this product, including the implied warranties of merchantability and tness for a particular purpose are limited in duration to the warranty period. No warranties expressed or implied will applied after this period. ComNet shall not be liable for lost prots, damage to other property caused by any defects of this product, or damages based upon inconvenience, loss of product use, loss of time, commercial use, incidental and/or consequential damages for the breach of any expressed or implied warranty, including damages to property, and to the extent permitted by law, damages for personal injury, even if ComNet has been advised of the responsibilities of such damages.

If you have any further questions, please contact Customer Support:

Address of the manufacturer.

ACRE (ComNet)
3 Corporate Dr, Danbury, CT 06810 USA
Email: designcenter@comnet.net
Tel: 1-860-325-7707
www.comnet.net